

Sling Care Instructions

Sling products are created from select fabrics, which are stretched on to the furniture frame providing a firm, yet very comfortable seating experience. The sling furniture product line is a very popular choice and has several unique advantages, primarily associated with its care and maintenance.

1. Sling fabrics allow water and air to flow through for quick drying.
2. Sling fabrics remain quite cool due to the flow-through nature of the fabric weave.
3. Sling fabrics are easy to clean - simply wash and rinse with your garden hose. For more difficult stains, mix three gallons of warm water with one cup of household bleach and one cup of mild detergent. Apply with brush and rinse thoroughly. Do not use solvent type materials which will cause the yarn to become brittle.

INSTRUCTIONS FOR USE

GLOSTER SLING & WOVEN CLEANER

25oz / 750ml plastic bottle with trigger-action head. Water-based formula - both non-toxic and environmentally friendly. Cleans and restores the new look of sling and synthetic wicker woven furniture. Special non-foaming formula. Each bottle is supplied complete with a special applicator pad.

1. Before using the Sling/Woven Cleaner, protective gloves (included in box) and eye protection should be worn. Cover the ground under your working area before cleaning.
2. Shake Sling/Woven Cleaner before use.
3. Apply Sling/Woven Cleaner with a soft cloth or sponge. Allow to soak for 1 minute.
4. Brush the furniture clean with a soft scrubbing pad (included in box) and water.
5. Rinse furniture well with clean water.
6. Severely stained surfaces may require a second treatment.